



JOINT INSTRUCTIONS




STEP 1 (STRIP)



STEP 2 (CRIMP 1)


STEP 3 (INTERNAL HEAT
SHRINK)

HEAT SHRINK TUBE TO BE
GENTLY WARMED TO
ENABLE SHRINKING

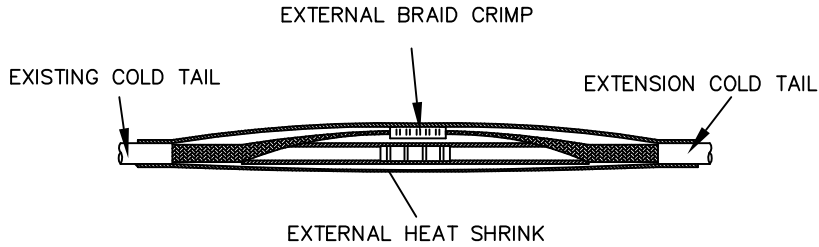

STEP 4 (BRAID CRIMP)

STEP 5 (EXTERNAL HEAT
SHRINK)

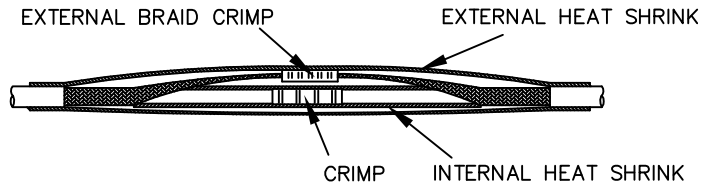

STEP 6 (TEST)

COMPLETION

ELECTRICAL TEST

1. CONTINUITY
2. I. R. LEVEL

KIT REF: E1001 C

QTY	DESCRIPTION
2	BOOT FERRULES
1	20mm / 2.4mm INTERNAL HEAT SHRINK
1	90mm / 6.4mm EXTERNAL HEAT SHRINK

No. 0	DATE	DRAWN	No. 1	DATE	DRAWN	No. 2	DATE	DRAWN	CLIENT	JOB No.	CAD No.	
FIRST ISSUE									TITLE	PROJECT No.	JWG No.	
									POWER LEAD EXTENSION KIT TYPE E1001 C	COMP. CODE		
No. 3	DATE	DRAWN	No. 4	DATE	DRAWN	No. 5	DATE	DRAWN	WARMFLOOR <i>Solutions Ltd</i>	SHEET	REVISION	SCALE
									BUSINESS & INNOVATION CENTRE WEARFIELD, SUNDERLAND SR5 2TA TEL: 0191 516 6289 FAX: 0191 516 6686 www.warmfloor-solutions.com	1	0	NTS